



FAQ's

1. How hot does it get?

At ambient, -8°F PerfectlyClear tested to heat at 34°F

2. Can it work with a switch?

Switch, plug, or hardwire to controller (gutter: hardwire only)

3. Can heating panels overlap adjacent panels?

Not designed to overlap can cause overheating

4. Why are there two strips of adhesive on the top layer?

You may install from any direction in relationship to the power source

5. Does the heat radiate beyond the edges of the panel?

Yes, .5" on the long sides

6. Does the System require and Electrician to install?

Recommend licensed contractor for products requiring electricity

7. Is the controller a requirement?

Highly recommended, not required

8. Why do we take a second resistance reading?

To be certain no damage occurred during the installation

9. Can the panels be removed and re-used?

The panels are not re-usable

10. What is the longest length for a continuous run?

For 120V: 48' For 240V: 96'